


### Enable Generator To Auto Start

1. If the “Set Generator OFF AUTO ON EQ” menu is not displayed on Inverter #1 (top Inverter), press the green “Gen Menu” button (1) once.
2. At the Main Distribution Panel, on Inverter # 1, (top Inverter), press the green Gen Menu button as needed to move the cursor below the “A” in Auto.
3. The Auto Start function of the Inverter is now enabled. This will ensure that the Generator auto starts when the House Battery voltage drops to the preset battery voltage.

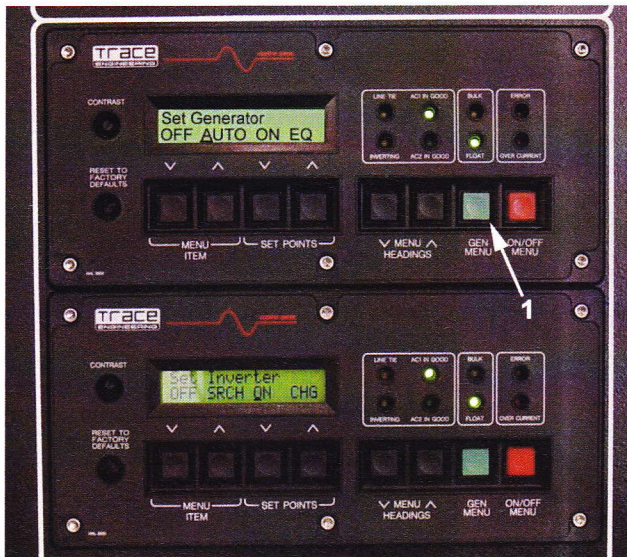


### Disable Generator Auto Start

The Generator Auto Start feature must be disabled when the coach is in an enclosed building or confined area, during maintenance, or any other time work is being performed on the Generator or electrical system.

The “Auto Start” feature MUST be set to OFF to prevent automatic or unintentional starting of the generator.

1. If the “Set Generator OFF AUTO ON EQ” menu is not displayed on Inverter #1 (top Inverter), press the green “Gen Menu” button (1) once.

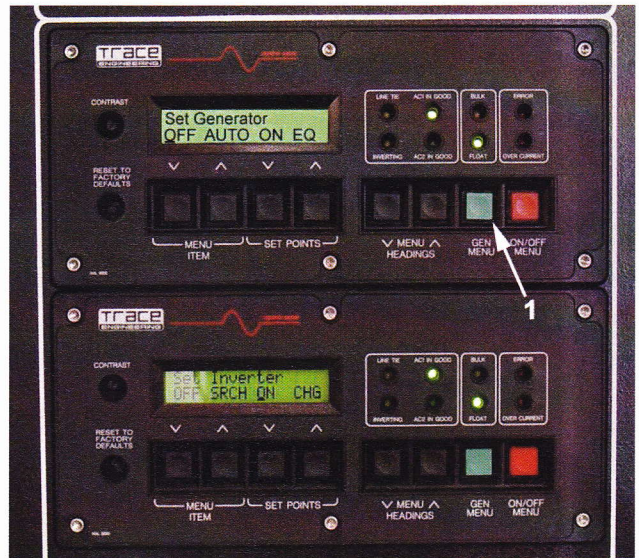

**⚠ DANGER**

**Risk of death from Carbon Monoxide.**

**Do not operate the Generator while the coach is in an enclosed building or confined area.**

**The Generator “Auto Start” function must be turned off while the coach is in an enclosed building or confined area.**

**Do not operate the Generator without having a working carbon monoxide detector.**

**Always test the carbon monoxide detector for proper operation prior to using the Generator.**

**Refer to “Disable Generator To Auto Start” to disable the “Auto Start” function.**

2. At the Main Distribution Panel, on Inverter # 1, (top Inverter), press the green Gen Menu button as needed to move the cursor from below the “A” in Auto to below the “O” in OFF.
3. The Auto Start function of the Inverter is now disabled.