

⚠ WARNING

Risk of severed digits or limbs.


With the Generator Remote Start Switch (1) in the ON position (normal configuration), the Generator can be started from a remote switch, or automatically by the Inverter without warning.

Before performing any type of service or inspection on the Generator, move the Remote Start Switch (1) in the Generator bay to the OFF position as shown below.

After completing service or inspection on the Generator, move the Remote Start Switch back to the ON position.

4. To disable the Inverter and all the switches inside the coach and bays from starting the Generator, move the “Remote Start” switch (1) to OFF. The switch is on the forward end of the Generator control box in Bay Three right (inside the stainless steel Generator box).

To enable remote starting and “Auto Start” capabilities, return the Remote Start switch (1) to the ON position and move the cursor on #1 (top) Inverter to under the letter “A” in Auto.

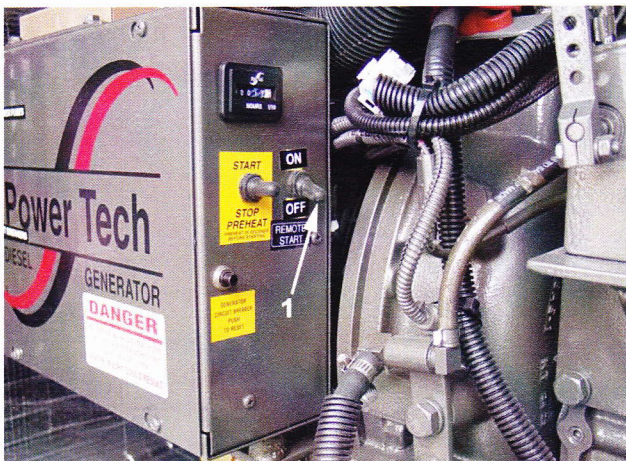

17.5 K Generator



20 K Generator