



Generator Troubleshooting

If the Generator has been running for more than 30 seconds and the “AC2 In Good” light is flashing, refer to “Resetting An Inverter” in this section.

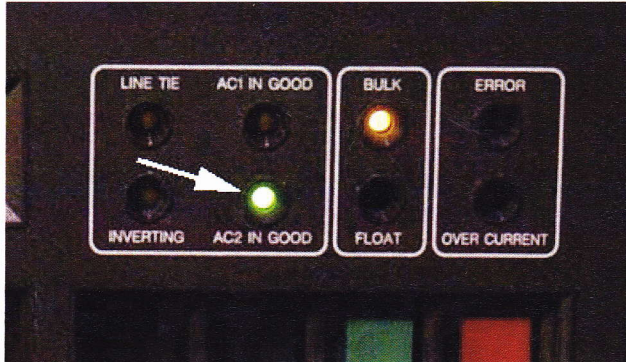

If the Generator is running and there is no “AC2 In Good” light (flashing or solid), check the Generator output breaker (1) on the Generator Control Box in Bay Three right side.

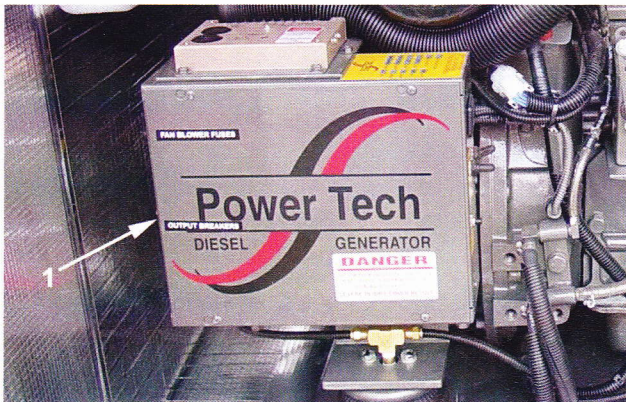

17.5 K Generator



20 K Generator

If the Generator cranks over but will not run when you release the start switch, check the following:

- Verify that the fuel tank is more than one quarter full.
- Remove fuel filter and verify that it is full of fuel, if low, fill with fuel and attempt restart.
- Check the start fuse on the forward end of the Generator Control box in bay three right side.
- Verify that the coolant level in the coolant tank (2). This level must be full (sensor switch is installed on side of tank).
- Verify engine oil level.
- Call Customer Service or the 24 Hour Hot line for further assistance.